


Standard 3" Round In-Ground Mailbox Post (Model 7516) Assembly Instructions

Thank you for purchasing this premium mailbox post. We know you'll be satisfied with the years of service it will provide. If you have any questions about how to assemble or install this product, or if you need any replacement parts, please call us directly at (800) 464-7491 or contact us at www.architecturalmailboxes.com.


Assembly Instructions

Tools

Two Crescent or Open End Wrenches
(not included)



- or -



Hardware

 x 4, small hex bolts

 x 8, small washers

 x 4, small nuts

To attach the mailbox to the post:


 x 4, large hex bolts

 x 8, large washers

 x 4, large nuts


1

Slide the Top Plate onto
the Post end until the bolt
holes are aligned.

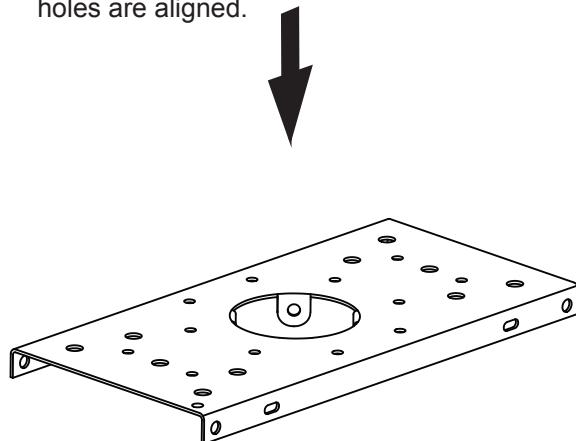

2

Attach the Top Plate to the
Post using the 4 small bolts.

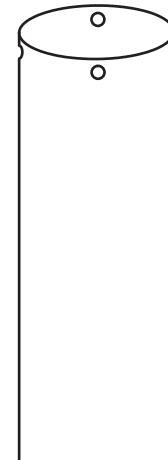

3

The method for installing the mailbox
onto the post and the post into the
ground depends on the type of mailbox
being used. Please refer to the
instructions included with your mailbox
for the remainder of the installation.
Use the large bolts, nuts and washers
to attach the mailbox to the post.



ARCHITECTURAL
MAILBOXES®