


D600 DIRECTORY INSTALLATION CUT SHEET

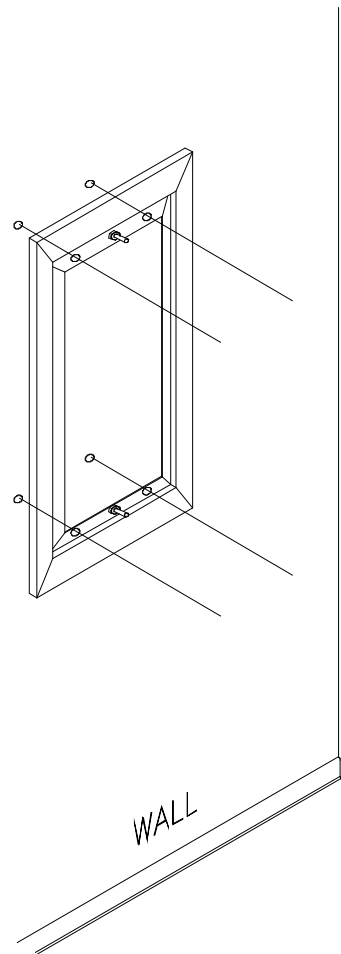

INSTALLATION NOTES:

1. REMOVE HEX NUTS (NOT SHOWN) FROM FRONT OF DIRECTORY.
2. REMOVE INTERIOR PANEL (NOT SHOWN) FROM FRAME.
3. LOCATE FRAME ON WALL AT DESIRED LOCATION.
4. DRILL (4) Ø0.187 HOLES THRU FRAME FLANGE INTO WALL AS SHOWN.
5. INSTALL PLASTIC EXPANSION INSERTS INTO HOLES IN WALL.
6. MOUNT FRAME TO WALL USING #8 SHEET METAL SCREWS.
7. MOUNT INTERIOR PANEL TO FRAME USING HEX NUTS (NOT SHOWN) REMOVED IN STEP 1.

AUTH AF FLORENCE
MANUFACTURING COMPANY
5935 CORPORATE DRIVE
MANHATTAN KANSAS 66503

CS5055

2/23/04